


# INSTALLATION INSTRUCTIONS FOR LOCKING SECURITY BARS

## For Commercial Models and Pet Door Models


### First Thing to Do

**IMPORTANT:** THE AREA WHERE THE BRACKETS ARE ATTACHED TO THE SLIDING GLASS DOOR MUST BE CLEANED WITH ISOPROPYL (rubbing) ALCOHOL TO REMOVE ANY DIRT OR OIL FOR THE PROPER ADHESION OF THE 3M VHB FOAM TAPE, DO NOT USE WINDOW CLEANER OR SOAP.

## STEP 1

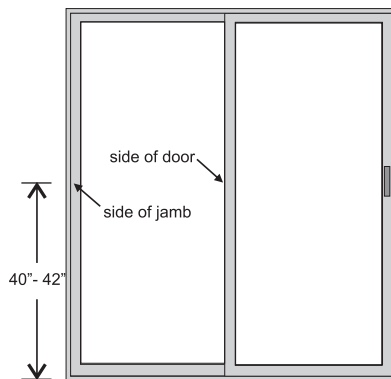


Measure from bottom of track up the side of door and the side of the jamb, make light pencil mark. Suggested standard height 40" to 42"

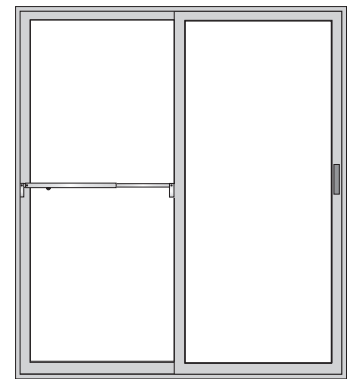

Remove backing tape from foam tape on end brackets and install lock with top of brackets below pencil mark.

### Commercial Model and Pet Door Model Shown

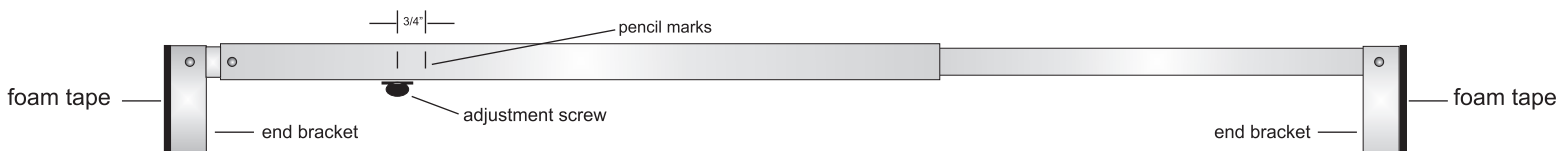

-Slide adjustment screw towards center of lock until it stops, mark center of screw with a light pencil mark.

-Measure from pencil mark 3/4" towards center of lock and make 2nd pencil mark.

-Now lift the lock from the center and move adjustment screw to the 2nd pencil mark and tighten screw with hex wrench supplied.

Test door by opening and closing to make sure the lock stays in the unlocked position until you manually lock it. If there is any play in the door when it is locked adjust the screw in 1/8" increments until there is no play.

## STEP 2

**Depending on usage a few drops of household oil on the inside track will help keep the action smooth.**

**CONTACT: Phone: 541-218-3570 ~ [sales@locking.org](mailto:sales@locking.org)**

JTC Solutions LLC warrants all Locking products for a period of 5 years for any mechanical defects.

JTC Solutions LLC assumes no responsibility for any misuse, improper installation or any damages that occur from use of. 2016