



# Instructions for LockKing™ Patio Door Lock

For Original Model with knob

How to make an adjustment to raise door as high as it will go without touching the top.

## **-IMPORTANT-** ***First Thing to Do***

- Adjust tracking wheels on bottom of door
- This very important to do to prevent anyone from lifting door out of track.

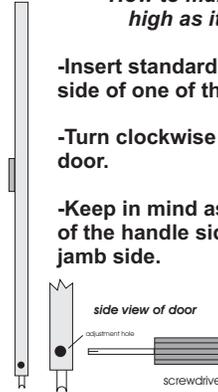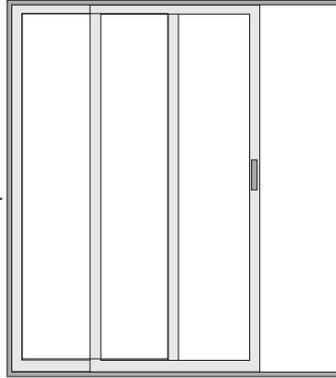

- Insert standard screw driver or philips screwdriver into the side of one of the 2 holes at the bottom of your door.
- Turn clockwise or counter-clockwise, which ever raises the door.
- Keep in mind as you raise the door that the edge of the handle side of the door lines up with the jamb side.


## **step 1**

Using a tape measure and pencil, measure up the inside of the door channel to 40"-42" (LockKing can be set from 6" to 48" depending on your needs) and make a light mark. Do the same on the edge of the door that moves.



## **step 2**

**MAKE SURE AREA WHERE BRACKET WILL ADHERE IS WIPED CLEAN**



- Remove the paper backing from the foam tape on the end of the brackets
- Center bracket on door and jamb with the top of the bracket even with pencil mark
- Make sure the door is fully closed and the lock is in the locked position.
- Slide adjustment knob toward the center of the lock until it stops. Tighten knob snugly.
- Measure 3/4" from center of knob towards the center of the lock, make a lite pencil mark on the top side of the lock.
- Next lift the center of the lock into the open position and move the knob so that the center of the knob lines up with the 2nd pencil mark you just made. Tighten the knob securely.
- The lock is ready to use. Try it out a few times, and make sure that the door has no play in it, if it does use the same procedure but just make a pencil mark an 1/8 of an inch at a time.
- When properly installed there should be no play in the door, and the proper spring tension will keep the lock from closing by itself.

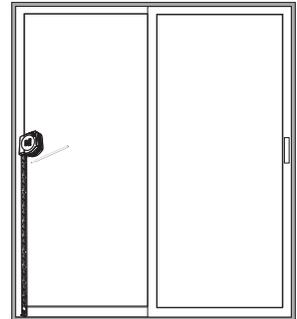

**UNLOCKING**

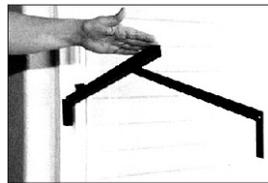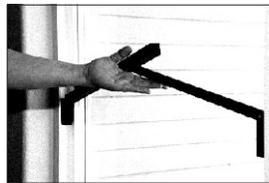

**LOCKING**

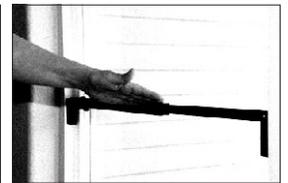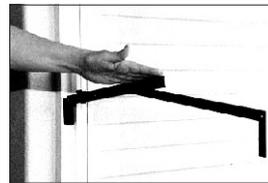

**LOCKED**

LOCKKING IS WARRANTED FOR 5 YEARS AFTER PURCHASE FOR ANY MANUFACTURING DEFECTS. ANY MISUSE OF THE PRODUCT WILL VOID WARRANTY. JTC SOLUTIONS ASSUMES NO LIABILITY FOR EITHER IMPROPER INSTALLATION, MISUSE OR DAMAGES THAT OCCUR FROM USE OF SECURITY BAR OR LOCK- 2010