




# INSTRUCTIONS FOR LOCKING WINDOW SAFETY BAR

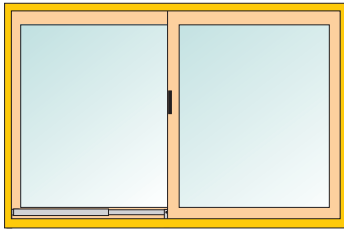


LOCKED

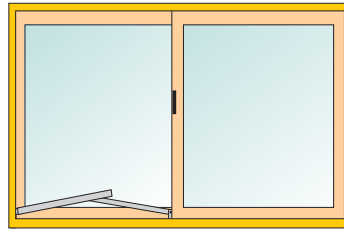




UNLOCKED

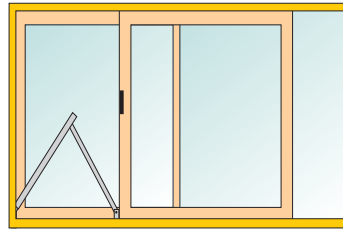


WINDOW PARTIALLY OPEN

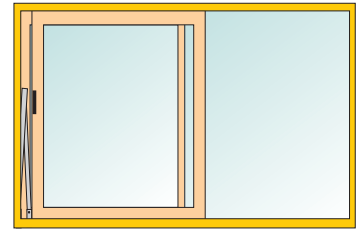

WINDOW FULLY OPEN

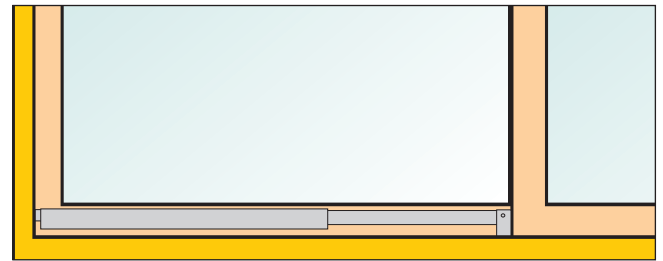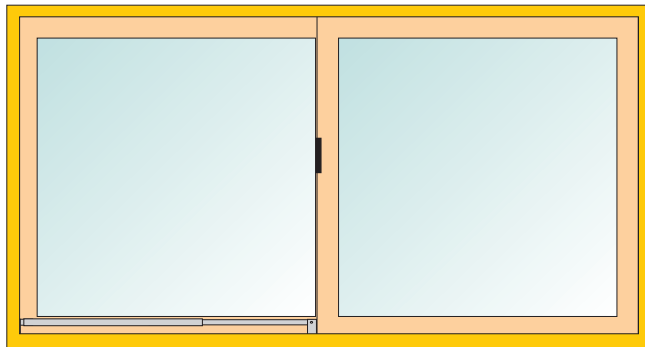

Safety Bar Lays Low Out Of View

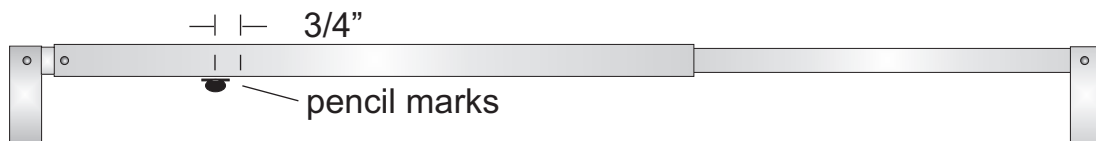

-Slide adjustment screw towards center of lock until it stops, mark center of screw with a lite pencil mark.

-Measure from pencil mark 3/4" towards center of lock and make 2nd pencil mark.

-Now lift the lock from the center and move adjustment screw to the 2nd pencil mark and tighten screw with hex wrench supplied.

**Test WINDOW by opening and closing to make sure the lock stays in the unlocked position until you manually lock it. If there is any play in the door when it is locked adjust the screw in 1/8" increments until there is no play.**